# JMA Weather Protection System™

JMA

WPS-N-1S, 1/4" NM Connector to Port

#### Materials (all sold separately)



WPS-N-1S



0

2 N port seals

JMA 1/4" NM connector



TW1412 torque wrench

### Step 1: Install WPS-N-1S and port seal



Prior to cable prep, slide the WPS-N-1S boot onto the 1/4" cable 8–12" from the end.



Prep the 1/4" cable and install the JMA 1/4" NM connector. Refer to the connector installation instructions



Install port seal, with text "For use with port" facing nut. Seal is black in color.

### Step 2: Connect and torque interface




Mate the male connector to the port.



Torque the connector to 14 lbf-in using the TW1412 torque wrench.

## WPS-NF compatible port specification

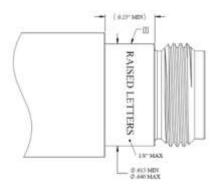

Surface to be free of flats, threads, or raised lettering whose characters are taller than 1/8".

( ) Indicates optional geometry.

## Step 3: Install JMA WPS to seal interface



Slide the WPS-N over the port seal until ribs are no longer visible.



Properly installed WPS-N. **NOTE:** all ribs of the port seal are fully covered by the WPS.

# JMA Weather Protection System™

WPS-N-1S,1/4" MDM Connector to Antenna or Device



#### Materials (all sold separately)



WPS-N-1S



WPS-MDF 2 port seals



JMA 1/4" MDM connector



TQ-78-F8 torque wrench

#### Step 1: Install WPS-N-1S and port seal



Prior to cable prep, slide the WPS-N-1S boot onto the 1/4" cable 8–12" from the end.



Prep the 1/4" cable and install the JMA 1/4" MDM connector. Refer to the connector installation instructions.



Install port seal.

### Step 2: Connect and torque interface




Mate the male connector to the port.



Torque the connector to 8 lbf·ft using the TQ-78-F8 torque wrench.

## **WPS-MDF** compatible port specification

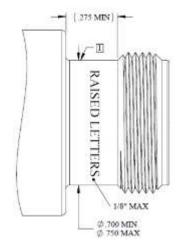

Surface should be free of flats, threads, or raised lettering whose characters are taller than 1/8".

## Step 3: Install JMA WPS to seal interface



Slide the WPS-N over the port seal until ribs are no longer visible.



Properly installed WPS-N. **NOTE:** all ribs of the port seal are fully covered by the WPS.

# JMA Weather Protection System™

WPS-N-1S, 1/4" 4MT Connector to Antenna or Device



#### Materials (all sold separately)



WPS-N-1S



WPS-4F 2 port seals



JMA 1/4" 4MT connector



TQ-78-F8 torque wrench

### Step 1: Install WPS-N-1S and port seal



Prior to cable prep, slide the WPS-N-1S boot onto the 1/4" cable 8–12" from the end.



Prep the 1/4" cable and install the JMA 1/4" 4MT connector. Refer to the connector installation instructions



Install port seal, with text "This side away from nut" toward port.

### Step 2: Connect and torque interface




Mate the male connector to the port.



Torque the connector to 8 lbf·ft using the TQ-78-F8 torque wrench.

## WPS-4F compatible port specification

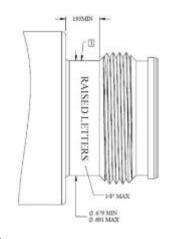

Surface to be free of flats, threads, or raised lettering whose characters are taller than 1/8".

## Step 3: Install JMA WPS to seal interface



Slide the WPS-N over the port seal until ribs are no longer visible.



Properly installed WPS-N. **NOTE:** all ribs of the port seal are fully covered by the WPS.