

# JMA Weather Protection System™

WPS-4RT-38S-01, 3/8" 4RT Connector to Antenna or Device



## Materials (all sold separately)



WPS-4RT-38S-01  
boot



WPS-4F  
2 port seals



UXP-4RT-38S-01  
connector



TQ-78-F8  
torque wrench

## Step 1: Install WPS-4MT-38S and port seal



Prior to cable prep, slide the WPS-4RT-38S-01 boot onto the 3/8" cable 8–12" from the end.



Prep the 3/8" cable and install the UXP-4RT-38S-01 connector. Refer to the connector installation instructions.



Install port seal, with text "This side away from nut" toward port.

## Step 2: Connect and torque interface




Mate the male connector to the port.



Torque the connector to 8 lbf-ft using the TQ-78-F8 torque wrench.

### WPS-4F compatible port specification

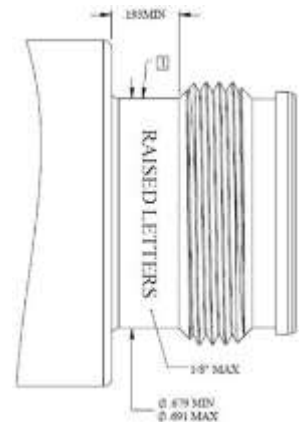

**1** Surface to be free of flats, threads, or raised lettering whose characters are taller than 1/8".

## Step 3: Install JMA WPS to seal interface



Slide the WPS-4RT-38S-01 over the port seal until ribs are no longer visible.



Properly installed WPS-4RT-38S-01.  
**NOTE:** all ribs of the port seal are fully covered by the WPS.