




# Weather Protection System Cross-Reference Chart


Rev C  
08.17.2023

Cable Construction	Size/Type	Cables Supported	Connector (see key for interface below)	Interface	Part (WPS)	Port Seal		
Corrugated cables	1/4" Superflex	JMA14S-50, JMA14SP-50; CommScope FSJ1-50A, FSJ1RK-50B, PTS1-50-P; RFS SCF14-50J, SCF14-50JFN; Hansen RF5014S, RF5014SZ; Eupen EC1-50-HF; Times SPP-250-LLPL, SPO-250; HUBER + SUHNER SUCOFEEED 1/4 HFFR, SUCOFEEED 1/4 HF; Trilogy APC014J50; Wireless Supply WS14/SF	UXP-XX-14S	DM	WPS-DM-14S	WPS-DF		
				NM	WPS-4MT-14S	WPS-NF		
				MDM		WPS-MDF		
				1M	WPS-1MT-14S	WPS-1F		
				2M	WPS-2MT-14S	WPS-2F		
				4M	WPS-4MT-14S	WPS-4F		
				DRA	WPS-DRA-1S	WPS-DF		
				4RT		WPS-4F		
				NRA	WPS-4RT-14S	WPS-NF		
				1RT		WPS-1F-14SRA		
	2RT	WPS-2RT-14S	WPS-2F-14SRA					
	MRA	WPS-NRA-1S	WPS-MDF					
	3/8" Superflex	JMA38S-50, JMA38SP-50	UXP-XXX-38S-01	2M	WPS-4MT-38S-01	WPS-2F-12		
				4M		WPS-4F		
				4RT	WPS-4RT-38S-01	WPS-4F		
	1/2" Superflex	JMA12S-50; CommScope FSJ4, FSJ4RK, FSJ4RN-50; RFS SCF12; NK Draka RFF1200; Eupen EC4HF; Leoni Flexline 1/2"S; LS/Superior Essex HFSC 12D; Hansen RF5012S, RF5012SZ; Rosenberger SL 1/2" S; Wireless Supply WS12/SF; HUBER+SUHNER SF 1/2 HF	UXP-XX-12S	DM	WPS-4S	WPS-DF		
				NM		WPS-NF		
				MDM	WPS-N-4S	WPS-MDF		
4M					WPS-4F			
DRA				WPS-DRA-4S	WPS-DF			
4RT					WPS-4F			
MRA				WPS-NRA-4S	WPS-MDF			
NRA					WPS-NF			
1/2" Annular				JMA12-50; CommScope LDF4, LDF4RK, LDF4 RN; RFS LCF12, LCF12-50JL; NK Draka RFA1200; Eupen EC4; Leoni Flexline 1/2"R; LS/Superior Essex HFC 12D, HFAC 12D, LHF 12D; Hansen RF5012, RF5012Z; Rosenberger SL 1/2" R; Wireless Supply WS12; Belden RA500, RA500R	UXP-XX-12 UXP-XX-12L	DM	WPS-4A	WPS-DF
						NM		WPS-NF
	2M	WPS-N-4A	WPS-2F-12					
	MDM		WPS-MDF					
	4M		WPS-4F					
	DRA	WPS-DRA-4A	WPS-DF					
	4RT		WPS-4F					
MRA	WPS-NRA-4A	WPS-MDF						
NRA		WPS-NF						
7/8"	CommScope AVA5, AVA5RK, AL5, LDF5, VXL5; RFS LCF78, LCF78-50JL, UCF78, CU2Y; NK Draka RFA78; Eupen EC5; GT-SAT HCTAY-50-22; Leoni Flexline 7/8"R; LS/Superior Essex LHF 22D, LHF-22DU; Hansen RF5078; Rosenberger SL 7/8" R; Hengxin HCTAY-50-22	UXP-XX-78 UXP-XX-78C UXP-XX-78FX	DF	WPS-5	WPS-DF			
1-1/4"	CommScope AVA6, AL6; RFS UCF114; NK Draka RFA114; Eupen Flexline 1-1/4"R; LS/Superior Essex LHF 33D; Rosenberger SL 1-1/4" R	UXP-XX-114	DF	WPS-6	WPS-DF			
1-5/8"	CommScope AVA7, AVA7RK, AL7, VXL7, LDF7; RFS LCF158, NK Draka RFA158; Eupen EC7; LS/Superior Essex LHF 42D, LHF-42DUF; Rosenberger SL 1-5/8" R	UXP-XX-158	DF	WPS-7	WPS-DF			


## WPS-DF COMPATIBLE PORT SPECIFICATION

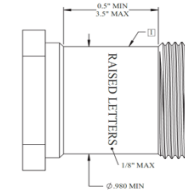


## WPS-NF COMPATIBLE PORT SPECIFICATION

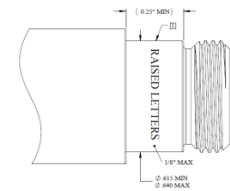


## WPS-MDF COMPATIBLE PORT SPECIFICATION

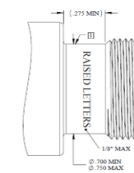


## WPS-4F COMPATIBLE PORT SPECIFICATION

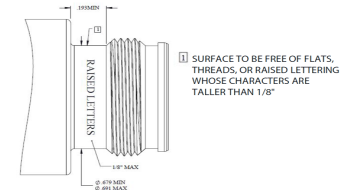

## WPS-2F COMPATIBLE PORT SPECIFICATION

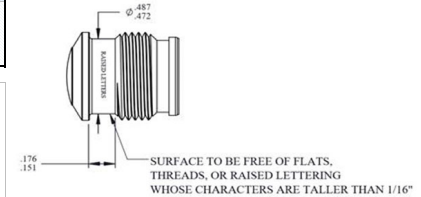

## WPS-1F COMPATIBLE PORT SPECIFICATION

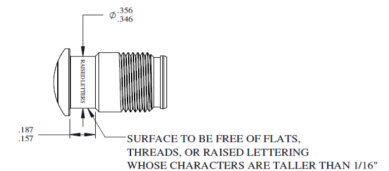

Interface Key:	
DM - DIN Male	MDM - 4.1-9.5 Male
DF - DIN Female	MRA - 4.1-9.5 Right
DRA - DIN Right Angle	MDF - 4.1-9.5 Female
NM - N Male	4M - 4.3-10 Male Torque
NF - N Female	4F - 4.3-10 Female
NRA - N Right Angle	4RT - 4.3-10 Right Angle
1M - NEX10 Male Torque	2M - 2.2-5 Male Torque
1RT-NEX10 Right Angle	2RT-2.2-5 Right Angle

For any questions call (315) 431-7100 or email us at [customerservice@jmwireless.com](mailto:customerservice@jmwireless.com)  
Toll-Free Technical Support: **+1-888-201-6073**  
[www.jmwireless.com](http://www.jmwireless.com)